


PRODIGITAL



Temperature Control

- The 'Up/Down' keys allow you to adjust the set temperature..... ^ v
- When you press either key, you will see the word 'SET' and the desired temperature value. Use the 'Up/Down' keys to adjust the 'SET' value..... ^ v
- Press to confirm settings and return to the main display ✓

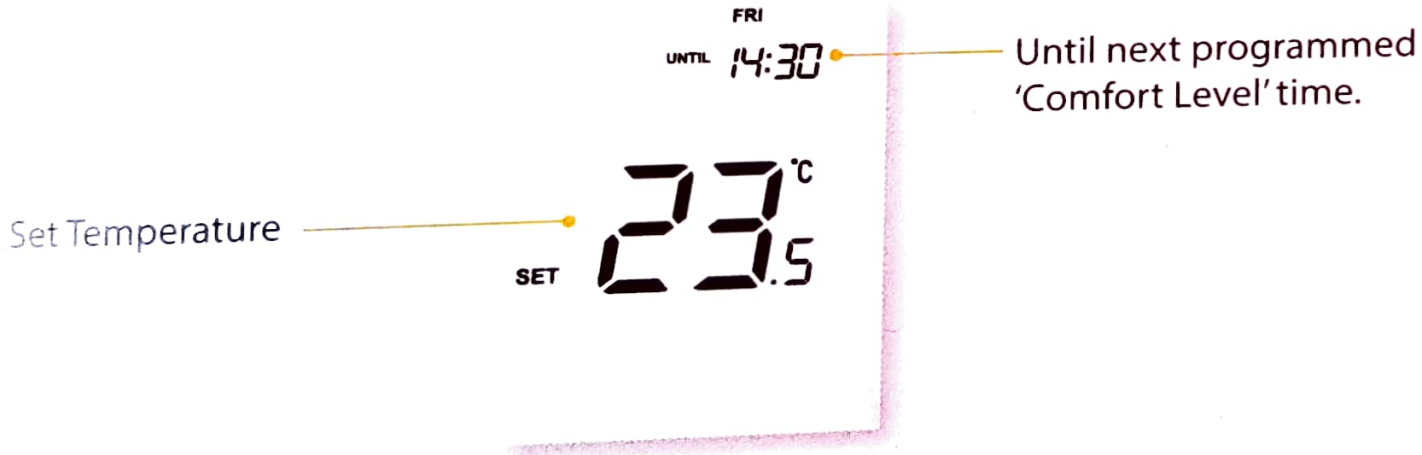

Note: This new temperature is maintained only until the next programmed comfort level. At this time, the thermostat will revert back to the programmed levels.



Mode Select

ProDigital™ can either be used as a thermostat or a time clock. Thermostat mode is the default setting.

To change between thermostat & time clock modes, follow these steps.

- Use the 'Left/Right' arrow keys to highlight then press and **hold** ✓ the button for 3 seconds..... <> ✓

At this point the screen will go blank showing only 'SETUP' and 'CLOCK'.

- Tap either of the 'Up' or 'Down' arrow keys to highlight 'SETUP', then **hold** the ✓ key for 10 seconds..... ^v ✓

The ProDigital™ will factory reset then provide 2 selectable mode options.

- Use the Left / Right keys to scroll between modes <>
- Mode 1 = Thermostat ←
- Mode 2 = Time Clock

Note: the selected option will flash.

- Press the ✓ key to confirm selection..... ✓

The ProDigital™ will reset all parameters and restart in the selected mode.

Note: The Mode Select function will reset all parameters that were entered during the set-up operations. These processes must be repeated after the restart has completed.



Optional Settings - Feature Table

FEATURE	DESCRIPTION	SETTING
01	Temperature Format	00 = °C, 01 = °F (00 = Default)
02	Switching Differential	00 = 0.5°C, 01 = 1.0°C (Default) 02 = 2.0°C, 03 = 3.0°C
03	Output Delay	00 - 15 Minutes (00 = Default)
04	Up/Down Temperature Limit	00° - 10°C (00° = Default)
05	Sensor Selection	00 = Built in Sensor 01 = Floor Sensor Only 02 = Built in Sensor with Floor Sensor (Default)
06	Floor Temperature Limit	20°C - 45°C (28°C Default)
07	Optimum Start	00 = Disabled (Default) 01 = 1 Hour 02 = 2 Hours 03 = 3 Hours 04 = 4 Hours 05 = 5 Hours
08	Rate of Change	Information Only
09	Program Mode	00 = 5/2 01 = 7 Day 02 = 24 Hour 03 = None programmable
10	(DST) Daylight Saving	00 = Disabled (Default) 01 = Enabled
11	Program Type	00 = 4 Comfort Levels (Default) 01 = 6 Comfort Levels

BATHROOMS

LIVING